

T VIEW®

FLIP DOWN DVD PLAYER

USER`S MANUAL

T VIEW®



T132DVFD

COMPATIBLE WITH
DVD/SVCD/DVCD/VCD/CD/MP3/MP4/JPEG/DIVX

www.tview.us

MADE IN CHINA

Before operating the monitor, please read this manual thoroughly and retain it for future reference.

Contents

| | |
|---------------------------------------|-------|
| Caution. | 1 |
| Check Point. | 2 |
| Name and Function of Each Part | |
| Unit. | 3 |
| Remote Control. | 4 |
| Remote Control. | 5 |
| Picture control | |
| Picture Selections. | 6 |
| Playing a Disc | |
| Play DVD Player. | 6 |
| Basic Operation | |
| FM Channel. | 6 |
| DVD Setup | |
| System setting. | 7 |
| Language Setting. | 8-9 |
| DVD Function | |
| Playback Function. | 10-11 |
| Advanced Function. | 12 |
| Installation | 13 |
| Connect Diagram | 13 |
| Disc Information | 14 |
| Cautions of Use | 15 |
| Trouble Shooting | 16 |
| Specifications | 17 |

Specifications

| | |
|---------------------|---|
| Power | DC12V |
| Current Consumption | 35W Max |
| Screen Format | 16:9 |
| Resolution | 1280*800 pixel |
| System | NTSC/PAL |
| Video Input | 1EA |
| Video Output | 1EA |
| Audio Input | 2EA |
| Audio Output | 2EA |
| Disc Format | MP3/VCD/DVD/CD/CD-R CD-RW/DVD-R/DVD-RW |
| IR Transmitter | Yes |
| FM Transmitter | Yes |
| Dome Light | Yes |
| Remote Control | Yes |
| Dimensions (inch) | (W) 16* (D) 12.6* (H) 2.6 |

Note:

This equipment has been tested and has been found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions. Operation of this equipment in a residential area is likely to cause harmful interference. In some cases, the user will be required to correct the interference at his own expense.

Trouble Shooting

| TROUBLE | ACTION |
|--|---|
| No power | Check and see if the power cable is connected properly. |
| No picture | Make sure that the equipment is connected properly. Check and see if the connected monitor is turned on |
| Stopped picture | Check to see that the video cable is connected. Check to see that the monitor is turned on. |
| The playback picture is poor | Clean the disc |
| No color | The color system of this unit does not match the color system of the monitor. Check the color system of the unit. |
| Distorted sound | Adjust the video system by pressing the TV system button. (PAL, NTSC) |
| The remote control doesn't work properly | Remove any obstacles between the remote control unit and the remote control sensor. Operate the remote control at a shorter distance. |
| "DISK ERROR" is display on the screen | Set the power button to OFF and then back to ON alternatively, Turn off the power, disconnect the power plug, and then reconnect it. |

Check point

When a disc is brought from a cold environment to a warm one, there may be moisture on the disc, or condensation will appear on the pickup lens. It will effect the playback.

1. Remove the disc from the DVD player.
2. Turn on the power and leave it on for an hour to vaporize the condensation.
3. You can operate the DVD player without any problem.

Caution

Please read and observe all warnings and instructions in this owner's manual and those marked on the unit. Retain this booklet for future reference.

There are two kinds of alarm symbols as follows:



WARNING

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



CAUTION

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING

The driver should never operate these products while the vehicle is in motion!

Installation of all TV monitors must be out of the driver's field of vision!

Do not try and service these products yourself, seek only a qualified service center or factory service center.

Be careful not to drop or apply undue pressure to the front panel of your video monitor. If the screen cracks due to misuse your warranty will be void!

Make sure to keep products away from heater ducts or vents and out of direct sunlight. Do not mount forward of the driver's shoulders.

Be careful not to overload your cigarette lighter plug by adding more than one device at a time.

Be careful with any liquids in your car. If you or your child spill any liquid on these products, park your vehicle at the roadside and turn the key off to disconnect or wipe the products with a towel. Do not operate the equipment until all liquids have evaporated or you have had the monitor inspected by a qualified Technician. Severe harm or death can occur!

Only use a wet cloth to clean the screen, only use purified water on the cloth, wring out all excess water before wiping the screen. Do not use any cleaners or chemicals to clean the screen. In most cases a dry cloth will do!

Do not mount the product where it will obstruct the deployment of the airbag or in an area where it would affect the vehicular control. Also be careful to avoid mounting the product where it can become hazardous during sudden stops or in the event of an accident.

Caution

Quality installations are best performed by qualified and certified installers.

Watching the monitor for an extended period of time without the engine running may deplete the vehicle's battery charge

This product is designed for operation with a 12 Volt DC, negative ground vehicle. It is not suitable for operation under other conditions or voltages.

Check Point

- 1 The operating temperature of this product is limited to $-4^{\circ}\text{ F}\sim+176^{\circ}\text{ F}$. Your vehicle can reach temperatures up to 212° F in the summertime.
- 2 If your vehicle is extremely hot or cold you must allow time for your air conditioner or heater too cool or heat the vehicle until operating temperatures have return to normal operating ranges.
- 3 Optimum picture quality will be achieved when viewed from directly front of the monitor (± 30 degrees).
- 4 Do not open the housing and attempt to make any repair yourself. Refer servicing to qualified personnel.
- 5 DVD Players use an invisible laser beam which can cause hazardous radiation exposure. Be sure to operate the unit correctly as instructed.
- 6 Do not cut the car power supply off while a disc is palying. It can cause damage to the DVD Player.

Cautions on Use

Handling

When holding with both hands



Cleaning discs

 
Fingerprints or dust on discs may reduce sound or picture quality. remove them by soft cloth wiping the disc from the center toward the edges gently.



- . Do not use damaged (cracked or werped) disc.
- . Do not scratch signal surface or let it dirty.
- . Do not stick a label or a glue-based note on either side of the disc.
- . Do not use discs that have glue or damaged label with exposed adhesive residue, it might result in damage to your DVD player.

Do not put discs in the sunshine.
Park your car in the shade

For tough dirt, wipe softly with a wet cloth and then with a dry one.
Do not use any type of solvent such as thinner, benzene.
Do not use antistatic spray

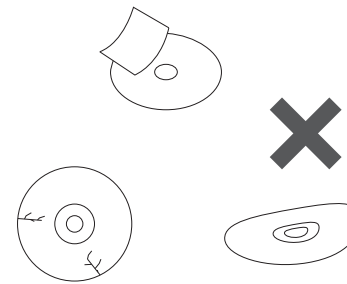


Irregularly shaped dies

Irregularly shaped discs(heart-shaped discs, hexagonal discs, etc.) cannot be played on this player.
May cause damage to the player.
Only use round discs.

Storing discs

Always put discs in their place and store them vertically.
Do not put discs in hot or humid place, places exposed to direct sunlight and places in which the temperature is extremely low or high.

 - . Read any cautions included with the disc carefully

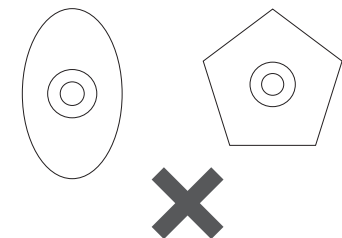

Disc Information

DVD features

DVD disc provide high-resolution images with high- quality sound and surround sound effects. This DVD player can play not only DVD discs of various versions, but also S-VCD ,VCD , audio CD and MP3 discs.

Each disc only plays the information saved in it, and some functions cannot be utilized.

Discs that cannot be played

DVD-RW, DVD- REM, CD-ROM, CD- EXTRA discs cannot be played on this unit. Also, a CD or a CD-RW which was recorded on special software cannot be played.

Region code

Your DVD player is designed and manufactured to region management information that is recorded on a DVD disc. The region number of this DVD Player is 1 . This DVD player plays free code also.

Copyright protection.

This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by the Macrovision Corporation and other rights. Owner's use of this copyright protection technology must be authorized by the Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by the Macrovision Corporation.

How to handle the disc

Don't touch the shiny side of the disc (the side with the embedded information).
Don't stick a lable or a glue - based note on either side of the disc. Don't use discs that have glue or a damaged gluey label- it might result in damage to your DVD player,
Don't put discs in the sunshine. Park your car in the shade.

Caution

Wipe softly with a wet cloth and then with a dry one.

 
Before playback, wipe the disc outward from the center with a clean cloth.

Do not use any type of solvent such as thinner, benzene, coommercially - available cleanners or antistatic spray.

To avoid damaging your DVD player, don't use a scratched disc.

Name and function of each part

PANEL

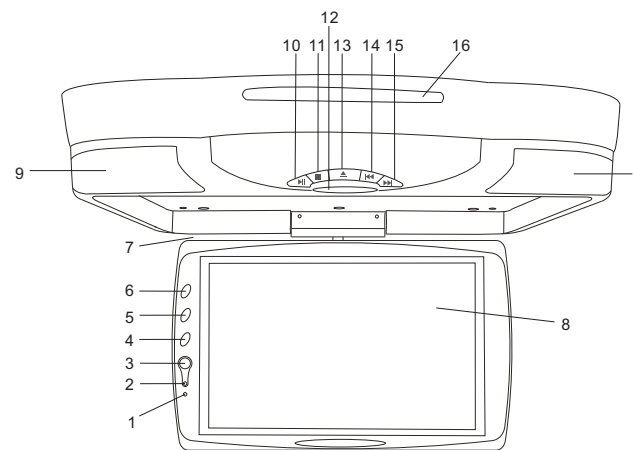


- | | |
|------------------------------|----------------------------|
| 1. Power led | 2. Remote sense window |
| 3. Power button | 4. Down button |
| 5. Menu button | 6. Up button |
| 7. Dome light switch | 8. Screen |
| 9. IR transmitter/Dome light | 10. PLAY/PAUSE button |
| 11. STOP button | 12. Monitor release button |
| 13. EJECT button | 14. PREV button |
| 15. NEXT button | 16. Disc tray |

Name and function of each part


Remote Control Unit

- | | |
|---|----|
| 1. MENU button Press this button to display the LCD's menu screen. | 12 |
| 2. EJECT button Press this button to slide the disc out and in. | 13 |
| 3. NUMBER buttons Press these buttons to input numbers. | 14 |
| 4. REV/FWD-Scan buttons Use these buttons to scan forward and backward through pictures or sound. | 15 |
| 5. TITLE button Press this button to display the DVD's title. | 16 |
| 6. MENU button Press this button to display the DVD's menu screen. | 17 |
| 7. ZOOM button Zoom in or zoom out the picture on screen. | 18 |
| 8. ANGLE button Press it to switch the picture's angle. | 19 |
| 9. FM button Press this button switch different audio FM transmitting frequency. | 20 |
| 10. Program button Use this button to program individually. | 21 |
| 11. VOL+ button Press this button to volume up. | 22 |
| 12. PBC button Playback control. | 23 |
| 13. POWER button The power turns on and off when this button is pressed. | 24 |
| 14. Play/Pause button Use this button to play picture or sound or stop temporarily. | 25 |
| 15. STOP button Press this button to stop playback of the picture or sound | 26 |
| 16. 10+ button Press this button to select a program of which the sequence number on the disc is more than 10. | 27 |
| 17. MODE buttons Press these buttons to DVD/AV functions switch screen. | 28 |

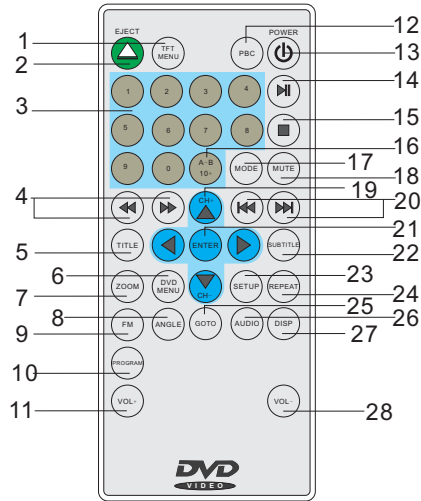 


Installation (Professional installation recommended)

 1. Unpack and check the contents. Disassemble the metal support bracket from the unit as shown in the illustration, by unscrewing the six screws on the unit body.
2. Tighten the metal support bracket to the ceiling support beam(s), using the supplied screws. Take extra care to not penetrate the roof of your car.
3. Connect the wiring harness, according to the diagram under "Connection Diagram" on page 17, to the wires located in the dome light of your vehicle.
4. Flip the monitor screen down and tighten the monitor to the support bracket, using the supplied screws.

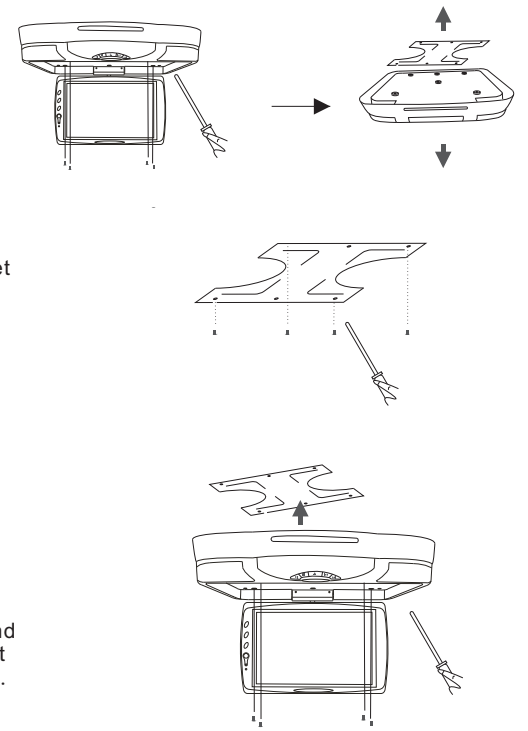

Connection Diagram

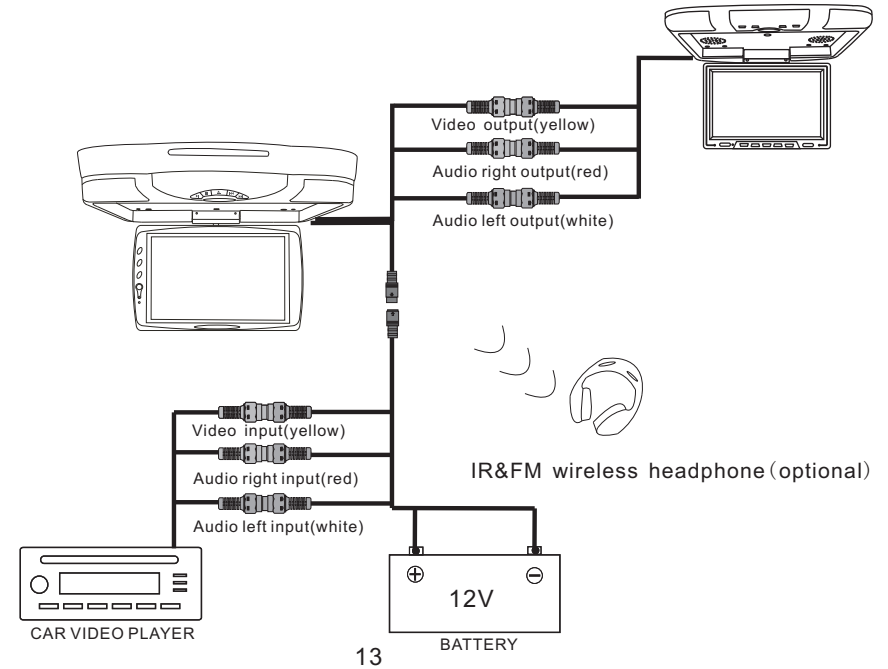 

Advanced Functions

Search for a specific scene

1. Press the SEARCH button.
2. Press the number button to select specific time or title chapter.
3. Press the ENTER button and playback starts from the nominated chapter.

Repeat play DVDs, Video CDs and CDs

. Repeat a TITLE, CHAPTER, or TRACK

Press the REPEAT button.

Select the title, chapter, or track you want to repeat.

. Repeat a section between Point A and B.

During playback, press A-B button on the remote control at the starting point of the Section you want to repeat. (Point A)

Press A-B button again at the ending point of the section you want to repeat. (Point B)

Press A-B button third time to cancel the A-B repeat function.

. Selecting the DVD's angle (multi-angle)

Press the ANGLE button while playing back a scene record with multiple angles.

If your DVD disc is not recorded with multiple angles. Press ANGLE button will not have any effect.

18. MUTE button

Press the button during playback to stop the audio output. Press it again to resume.

19. CURSOR▲/▼, ◀/▶ [LCD menu adjustment button

Use these buttons when select setting items to move the cursor up, down, left and right. Press up, and down buttons to change TV channels.

20. PRE/ NEXT buttons

Use these buttons to search for the beginnings of tracks or chapters.

21. ENTER button

Press it to confirm setting.

22. SUBTITLE button

Press it to switch the DVD's subtitle languages.

23. SETUP button

Press it to enter or quit the SETUP Menu.

24. REPEAT button

For DVDs use it to play title or chapters repeatedly.

For CDs, use it to play tracks or the entire disc repeatedly.

25. GOTO button

Press this button, select time or chapter to goto and play when disc is playing.

26. AUDIO button

 
Press it to switch the audio Languages.

27. DISPLAY button

Press it to display the disc information.

28. VOL- button

Press this button to volume down.

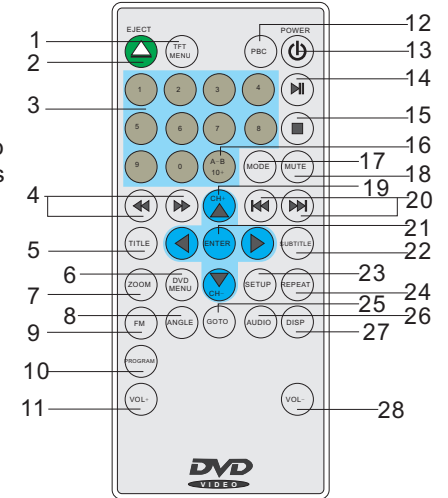

Picture control

Picture selections:

use to achieve the desired settings.

1. Press the MENU (Unit or Remote) button to bring up the on-screen picture control menu.
2. Select the desired menu by pressing the UP (Unit, Remote) buttons to change PICTURE, AUDIO, FUNCTION, OSD.
3. Adjust the current settings with the DOWN (Unit, Remote) buttons, press UP buttons, then press UP or DOWN on the unit to achieve the desired settings.

 
Playing a disc

Playing DVD player

1. Press the POWER (Unit, Remote) buttons.

2. Load a disc in the disc loading slot with the label side front.

Insert a disc in the disc loading slot and it will be played automatically.

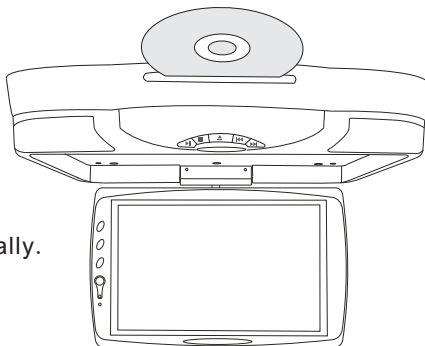

Basic operation

FM channel: This unit has multiple frequencies

Press panel or remote MENU button to bring up the menu, press panel up or remote left/right button to select the AUDIO directory, press panel down or remote up/down button to enter the lower-level option, and then panel up or remote left/right button to select FM items, press panel down or remote up/down button to select FM frequencies and press panel up or remote left/right button to enter the FM frequencies menu, press panel down or remote up/down button to select one that will be set the frequency, according to the panel up or remote left/right button to confirm.

FM remote control shortcuts

Press remote FM button to bring up the FM frequencies menu, press remote up/down button to select one that will be set the frequency, according to the remote left/right button to confirm.

Playback Functions

Stopping the disc

Press the STOP button.

Resume function (DVDs and Video CDs)

Press STOP button to stop playback, then press the play button to resume playback. Playback starts from the position at which it was stopped. When the disc is removed or the STOP button is pressed again, the resume function is cancelled.

Hint:

For some discs, playback may not start from the position at which was stopped. If the STOP button then the previous is pressed while the resume function is on, playback starts from the beginning of the title.

. Pausing the disc

Press the play/pause button.

Press the button again to resume playback.

. Scanning forward and backward

During playback, press the previous or next button.

Reverse direction

Forward direction

Returning to the previous chapter or track DVDs, Video CDs and CDs

Press the previous button during playback.

When pressed, playback returns to the beginning of the previous chapter or track.

Moving ahead to the next chapter or track DVDs, Video CDs and CDs

Press the next button during playback.

When pressed once, playback moves forward to the next chapter or track.

. Removing discs

1. Press the STOP button.

2. Press the EJECT button to eject the disc.

3. Remove the disc.

Note:

With CDs or on-sided DVDs, you do not have to worry about touching the label (printed) side or the disc with your finger. Two-sided DVDs, however, have signals recorded on both sides, so be careful not to scratch them when removing them from the player.

Playback Functions

Playing disc

1. Loading the disc

- . One of the following messages appears on the LCD: DVD , VCD , CD.
- . For some discs, playback starts automatically when the disc is close.
- . When discs for which program memories are set, playback starts automatically in the order.

2. Press the PLAY/ PAUSE button

- . Playback starts.
- For some discs, a menu screen appears. For video CDs, playing the disc according to the instructions on the disc's menu screens I called PBC (playback control) playback.

3.Hint:

- . For video CDs, it is also possible to play a disc without displaying the menu screen. For example, to play from track 1 , press the 1 number button while in the stop mode.
- *When play CD disc or MP3 discs, you are recommended to turn off the TFT LCD screen to save power. (Please make reference of" TFT ON/ OFF Function" on Page 10 and Page 12.)

If a menu screen appears

For DVDs with menu screen or video CDs with playback control (PBC) , a menu screen appears.

DVD

Use the cursor buttons to select the item, then press the ENTER button. Press the number button on the remote control unit to select item. Example: For DVDs with menu screen.

TITLE MENU
1 POP
2 JAZZ
3 COUNTRY
4R&B
5 CLASSICAL

1 POP
2 JAZZ
3 COUNTRY
4R&B
5 CLASSICAL

Video CD

Press the number button on the remote control unit to select item.

 
To display the menu screen

The way in which the menu screen is displayed differs from disc to disc .Press the MENU, TITLE button during playback or DVDs , the RETURN button during PBC playback of video CDs. For details, refer to documentation included with the disc.

How To Setup Menu


You can easily modify setup information on the setup menu.

System Setting

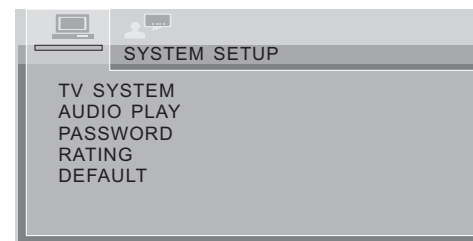


Please press setup button, then press ▲/▼ to select [SYSTEM] items.

 Still Mode Setting

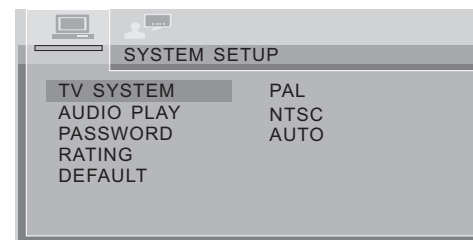


2. STILL MODE
To setup display mode of still pictures. There are three options[AUTO] [FIELD] and [FRAME].

 Auto Play Setting

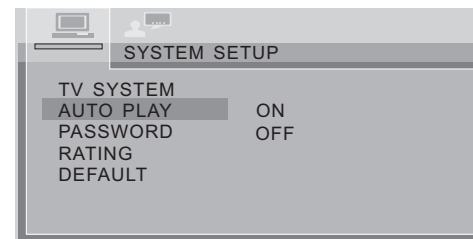


3. AUTO PLAY
To setup DISC auto play mode.

 Parental Lock Password Setting

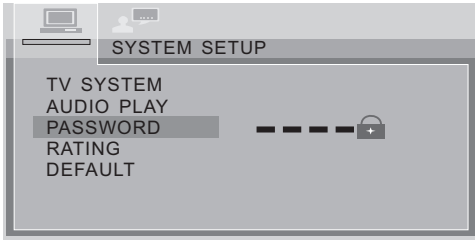


5. **PASSWORD**
Setup parental lock password. It is acceptable to input new password with 4 numeral to re-setup the parental lock.

 Parental Lock Setting

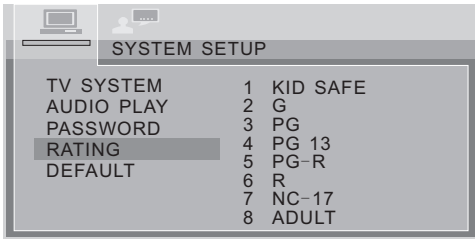


4. **RATINGS**
According to different grade, setup the parental lock.
Hint:
Normally, the grade is set as [0 LOCK ALL]

 DEFAULTS Setting

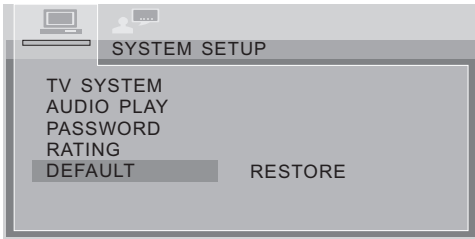


2. **DEFAULTS**
Setup all menus to the initial setting of factory.

 Language Setting

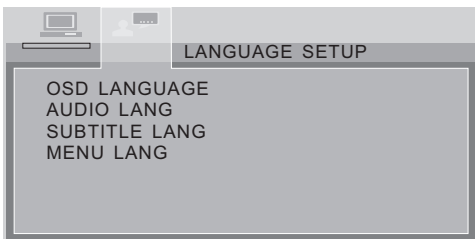


Please press setup button, then press ◀/▶ to select [LANGUAGE] items. press ▲/▼ to select language menu.

 OSD Language Setting

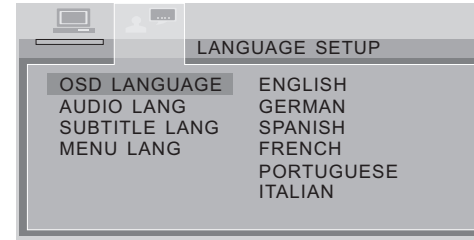


LANGUAGE
To setup OSD languages

 Audio Language Setting

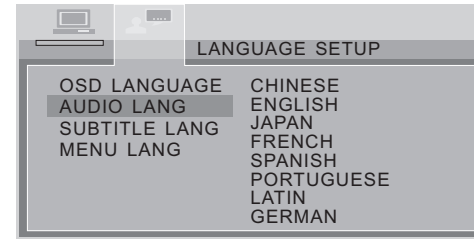


1. **AUDIO**
To setup disc output languages.

 Subtitle Language Setting

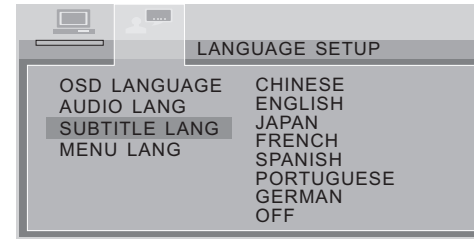

2. **SUBTITLE**
To setup disc subtitle languages.

 MENUS Language Setting

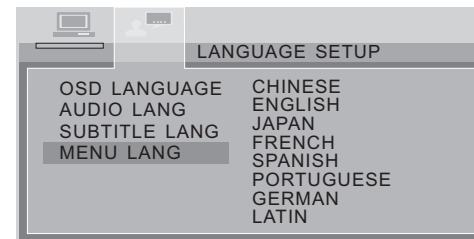

3. **MENUS**
To setup DISC MENU languages